www.groomart.hu I hello@groomart.hu I www.groomart.eu

shernbao


Your Pets, Our Care

SHERNBAO PET PRODUCTS MFG CO., LTD.

400-658-8428
WWW.SHERNBAO.COM
No. 81 Fengyi Road, Lanjiang Street, Yuyao City, Ningbo City, Zhejiang Province

shernbao

Model: PGC-780

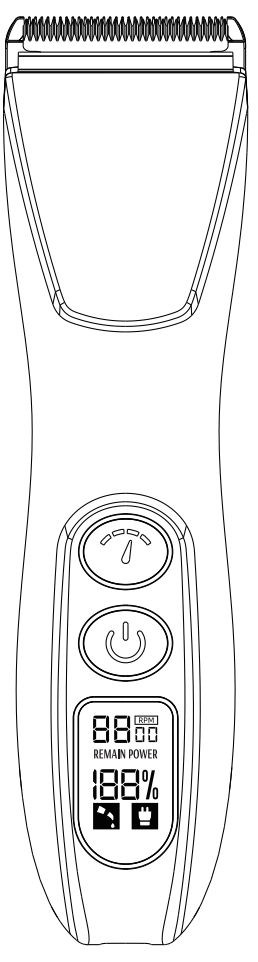


5-IN-1 STYLE BLADE CORDLESS ANIMAL CLIPPER

Pet Clipper

CLIPPER SPECIFICATIONS


Model	PGC-780
Input	5V ⎓ 1A 8W Max
Lithium Battery	3.7V 2600mAh
Charge Time	150 minutes
Run Time	200 minutes
Speed	5000 - 5500 - 6000 - 6500 - 7000 SPM
Noise	⩽ 65 dB
Package Includes	Clipper USB Type-C Cable - 2.4m / 7.9feet. Cleaning Brush Lubricant Oil - 8ml / 0.27oz Manual

Accessories:

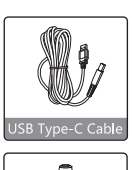





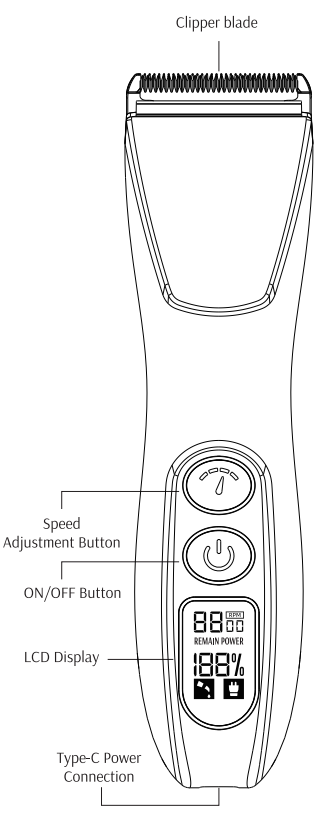

USAGE

Push the switch lever and adjust it to the desired speed position to use the clipper.


1. When the battery level is sufficient, the clipper can be operated cordless.
2. When the battery level is very low or there is no time to charge the clipper, it can be temporary operated with a cord like the corded version.

* The battery will be charged simultaneously when the clipper operated with a cord.

ON/OFF

Speed adjustment button
5000 - 5500 - 6000 - 6500 - 7000 RPM

Blade Length Adjustment Operation

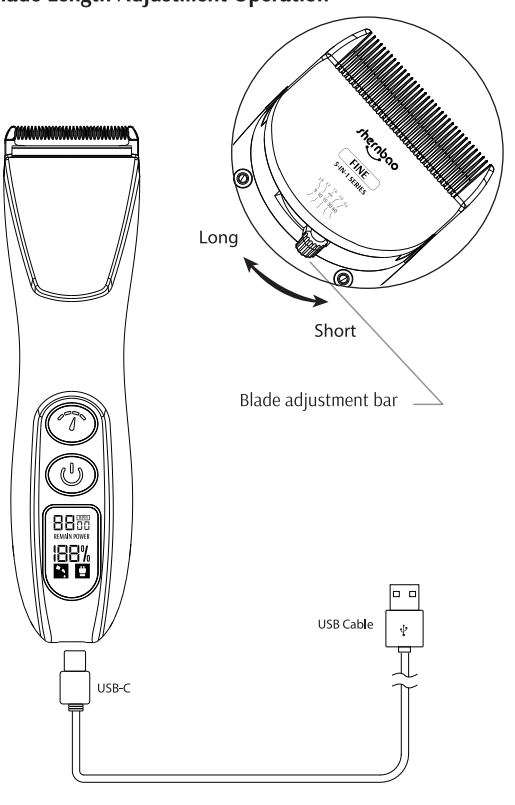


CHARGING INSTRUCTION

PGC-780 support working with cord and cordless, to meet the demands of long working hours. Cordless using is more convenient.

The clipper can be charged by charing cable and your power adaptor.


When fully charged, please remove the charing cable.
Remaining power from 0% to 100% takes only 150 minutes, convenient for you to use at any time.

During using the clipper with cord, it can be charged at the same time.

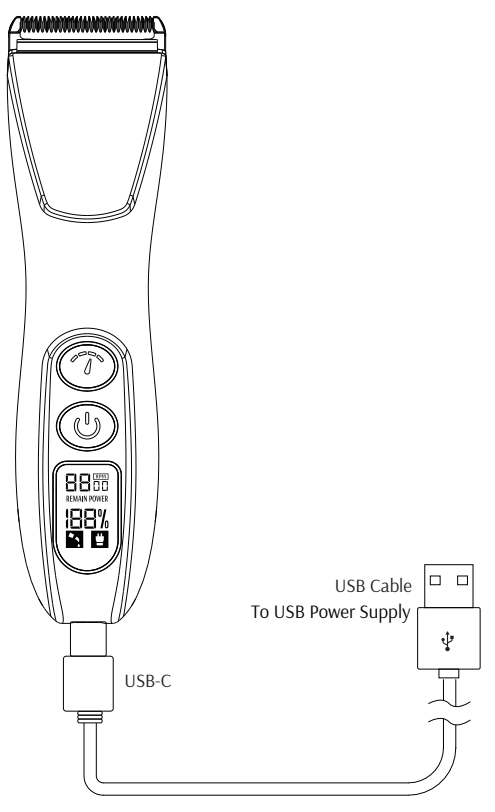

DISPLAY

LCD DISPLAY

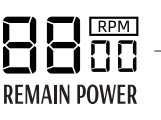

Speed Display
5000 - 5500 - 6000 - 6500 - 7000 RPM



Power Display
0%-100%

Corded operation

Continuously use for 30mins,
keeps flashing,
turn off the machine, then clean and oil.

POWER DISPLAY ON CORDLESS MODE



Power 0%-100%: Displays remaining battery percentage

Power ⩽ 5%: light

POWER DISPLAY ON CORDED MODE



Power 0%-100%:
Displays remaining battery percentage

Power ⩾ 100%:
+100% Flashing

(Charging speed is faster than running speed at corded mode.)

MAINTAINING BLADES


⚠ CAUTION:

Turn OFF the clipper and disconnect from outlet before performing maintenance.

BLADE REMOVAL, MAINTENANCE AND INSTALLATION


◆ BLADE REMOVAL

Hold the clipper face up with one hand and press the blade down with thumb, then remove the blade into the other hand to avoid dropping the blade.

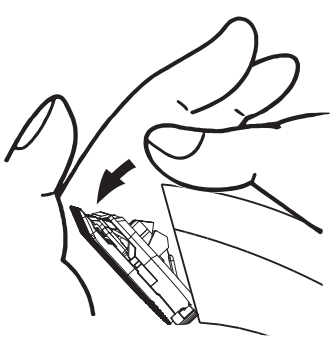


◆ BLADE MAINTENANCE

1. Blade cleaning: Press and hold the top of the shear blade. Use the cleaning brush to clean hair between the shear blade and the fixed blade.

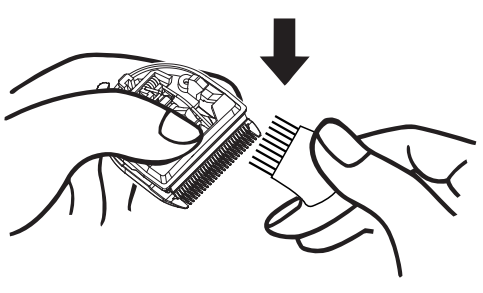

MAINTAINING BLADES


2. Blade oiling: Use 1-2 drops of lubricating oil on the 5 points shown below.

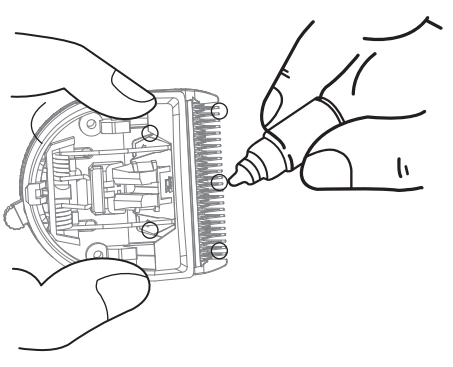

Do not detach the blade spring while maintaining to avoid malfunction.

◆ BLADE INSTALLATION

Hold the clipper face down with one hand and place the bottom of the blade aligning the middle of the blade with the clipper. Push the front of the blade down until it snaps into place.

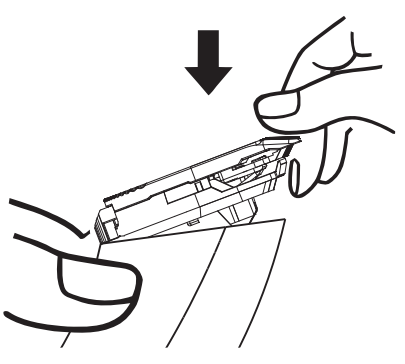


OPTIONAL BLADE SERIES

Material

Comb blade: Stainless steel
Shear blade: Titanium coating ceramic


Item: #0490

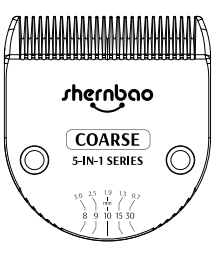

Coarse blade:
0.7 - 1.3 - 1.9 - 2.5 - 3.0 mm

Size adjustable:
30 - 15 - 10 - 9 - 8

Item: 0506

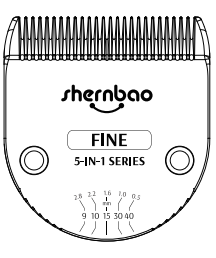

Fine blade:
0.5 - 1.0- 1.6 - 2.2- 2.8 mm

Size adjustable:
40 - 30 - 15 - 10 - 9

OPTIONAL ACCESSORIES


STAINLESS STEEL ATTACHMENT GUIDE COMBS KIT


Model: ACK-002 Item: #6645


Work perfectly with SHERNBAO 5-in-1
Stainless Steel Attachment Guide Combs for additional cut lengths.


* Please adjust the FINE blade to the "40" position when using combs.
* Please adjust the STANDARD blade to the "30" position when using combs.


ONLY can be used on smoothly brushed hair.

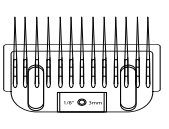

1/8"- 3mm

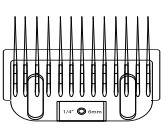

1/4" - 6mm

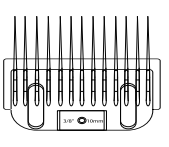

3/8" - 10mm

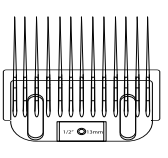
1/2" - 13mm

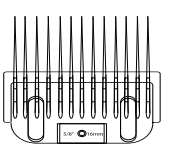
5/8"- 16mm

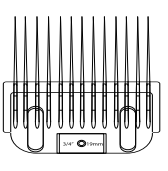
3/4" - 19mm

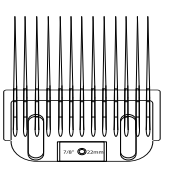
7/8" - 22mm

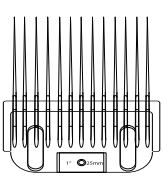
1" - 25mm