封底

shernbao®

武汉神宝宠物用品有限公司

神宝ペット用品株式会社

WUHAN SHERNBAO PET PRODUCTS MANUFACTURING CO., LTD.

WWW.SHERNBAO.COM

© 2021

Ver.: V1.6

封面

shernbao®

User Manual　使用说明书　取り扱い書

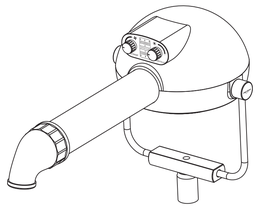

PSD-918P	Stand Dryer	脚架式宠物吹风机	足場のブロワー
PWD-919P	Wall-mount Dryer	壁挂式宠物吹风机	壁掛けブロワー

内页一

This is a top grade professional dryer, which designed with high-tech digital system adjusting wind speed and temperature smartly.
With bigger anion generator inside, effectively reducing static. High-tech well distributed heat make pet hair protected. Except completely drying hair, it furtherly made hair fluffy and plentiful naturally. Highly recommend to use at grooming salons.

In the summer of 2019, we upgraded the "Smart Care" hair care feature.
The hot and cold air automatically circulate every 6 seconds, making the pet's hair more fluffy and hydrated.
Hot air mode: Dry quickly the hair without damaging the hair scales and enhance the absorption of moisture.
Cold air mode: Quickly tighten hair scales, fill the water and lock the water, and reduce the grease.

Stand and wall-mounting type are flexible to fix diffuser in optimum position, quite convenient,
release groomer' hands to focus on grooming and modeling, extremely time-saving and efficiency improved.

For better using, PLEASE DO sturdily install this machine in accordance with this manual and follow rules as below before powered on.

1. Please check and make sure your voltage and max load current same as the requirements.
2. Please clear hair/fur on filter sponge before power on.
3. Please turn on switches in low-end for wind speed and temperature, to avoid sudden strong output once power on. (May adjust or increase freely afterwards.)

Technical parameter

Wind speed	max 22m/sec
Air Volume	7.4m³/min
Temperature	MAX Room Temperature + 60℃ (140°F)
Power	110~127V　1750W 230~240V　1800W
Motor Lifetime	≥8000hrs

For different voltage condition and different current required, please refer to this sheet.

Voltage condition (Volt)	Require Minimum load current (Amperes)
AC220-240V 50/60Hz	Not lower than 10A
AC110-127V 50/60Hz	Not lower than 15A

内页二

NOTICE

1. This appliance is not intended for use (including maintenance such as cleaning) by persons (including children aged from 8 years and above) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. The appliance must have a separate power supply line with a reliable ground connection. Do not use electricity with other high-power equipment.
4. For additional protection, the installation of a Residual Current Device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
5. Do not insert any metal objects into the gaps of the appliance, nor allow any liquid to drip into it.
   Otherwise, it may cause electric shock personal injury or short-circuit of the appliance.
6. Do not cover, wrap, block the air outlet and air inlet to avoid damage to the appliance.
7. If there is a malfunction during the use of the appliance, please disconnect the power of the host in time and send it directly to Shenbao's designated after-sales service center for professional maintenance.
   DO NOT disassemble the appliance by yourself. Otherwise, Shenbao company and our distributors are NOT responsible for any losses caused by this.
8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
9. WARNING- Do not use this appliance near water in bathtubs, basins or other vessels containing water!
10. When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
11. Please install and use the corresponding stand bracket or wall-mount bracket in strict accordance with this manual.

内页三

Installation of wall-mounted arm

1. REQUEST FOR WALL
   The wall must be strong solid enough to support the arm assembly and machine body.
2. REQUEST FOR HEIGHT
   Wall height: ≥240cm(94.5 inch)
   Height from bracket to floor: 184 / 195cm (72.5 / 76.8 inch)

Mounted to the ceiling

Hollow wall, or not enough height, or several sets machines required in one room, you may install machines to ceiling as another option (refer to this illustration). You can make ceiling bracket by yourself or buy and consult local Shernbao distributors.



Installation of wall plate

Refer to pictures as below, drill 3 holes same position as the wall plate, fix this plate on the wall by setscrews, and then hanging arm installed to the wall plate.



Note: Make sure that the fixing plate is installed horizontally, and ensure the wall is vertical to the ground, otherwise the machine will rotate automatically.

内页四

Instruction for installation

Suggestion:
Carefully check" Supporting Arm" sturdily mounted in machine, as to avoid unnecessary injury.

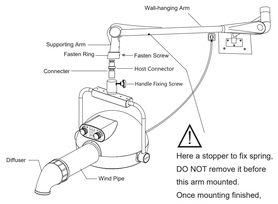

Here a stopper to fix spring,
DO NOT remove it before
this arm mounted.
Once mounting finished,
REMOVE it as to get work properly.

内页五

Cautions for daily maintaining

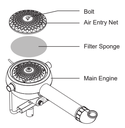

Attentions!
While daily maintaining, make sure machine is powered off.
1.Please regularly clean the filter sponge for air entry, at least once a day for commercial use.
STEP to clean: power off→counter-clockwise take out the " bolt" and net→take out " filter sponge" →clear hair etc. →clean " filter sponge & air entry net" (if they must be washed by water, dry every component before re-assembly).
2.Clean its surface by soft cloth, do not use neutral cleanser, if not, may lead defaced.

Operation introduction

The power switch is next to the power cord at the back.
Please power on before use.
We use smart digital controller inside. It may help to automatically memorize the previous settings of temperature and speed once power lost suddenly.

Wind speed & temperature
The latest encode controller inside, may control wind speed & temperature easily freely, to turn on high speed in clockwise and low in counter-clockwise relative light on/off displayed, along with warning tone.

Setting for standby
You don't have to switch the power switch at the back every time. Press on switch of Wind Speed, can switch On/ Standby mode.
When the red indicator light of "Standby" is on, the dryer is in Standby mode.

Setting for "SMART CARE"
Press on switch of temperature, can switch Ordinary/ Smart Care mode.
When the red indicator light of "Smart Care" is on, the dryer is in "Smart Care" mode.



内页六

Scaffolding blower assembly diagram

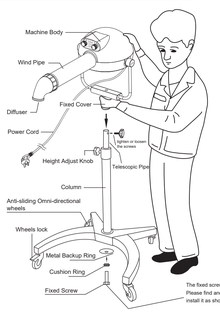

Please ensure that you install machine body into " telescopic pipe " , Do not release " Height adjust knob " before everything done. If " telescopic pipe " pop up, its jet power may lead accident.

Suggestion:
Before using, please check machine body is connected firmly with stand and legs, wheels are locked.

The fixed screw are placed on the bottom of the column. Please find and remove the fixed screw and install it as shown.

内页七

感谢您选用神宝 shernbao 专业犬型宠物吹风机！

这是一款为宠物美容店营业使用而设计的专业高档吹风机。采用最新数码科技精准调节风速和温度，内置更大功效负离子发生器，有效去除毛发静电，热量分布均匀，有效保护宠物皮毛，除了能宠干洗毛发外，更能达到蓬松、自然、饱满的效果。

2019年夏天，我们新增了 "Smart Care" 毛发护理功能。冷热风每6秒钟自动循环，让宠物毛发更蓬松、水润。
热风模式：快速吹干毛发，不损毛鳞片，加强水分的吸收。
冷风模式：迅速紧致毛鳞片，补水锁水，减少油脂。

脚架式安装和壁挂式安装都可迅速将出风口固定在所需位置并随意调整，方便快捷，解放了美容师的双手，极大的提高工作效率。

为了获得更好的使用体验，请务必按说明书稳固的安装本机。并在每次开机使用前遵循以下注意事项：
1. 检查当前用电线路的电压和最大允许电流是否与本产品所需一致。
2. 进风口过滤网是否清洁，如果有较多的毛发堵塞，请立即清理后再开机使用。
3. 检查本机的风速档位开关、温度档位开关是否处于低档位状态
   （操作时可根据使用需要，逐步提高档位，改变风速及出风温度）。

产品参数

风速	最高22米/秒
风量	7.4立方米/分
温度	最高: 室温+60℃
功率	220V / 2000W
马达寿命	≥ 8000小时

内页八

操作注意事项

1. 本产品不适合身体、感官或精神能力下降或缺乏专业经验、知识的人（包括8岁及以上的儿童）使用（包括清洁等维护），除非他们受到有安全责任意识的他人在确保安全的前提下指导监督进行操作。
2. 应对儿童进行监督，确保儿童不单独与本机一起玩耍。
3. 本机必须一个单独的且有可靠地线连接的电源供电线路，且该线路必须安装“漏电保护装置（RCD）”。切勿与其它大功率设备同线路用电。
4. 不要将任何金属物品插入机器的间隙中，也不能让任何液体滴入其中，否则会导致电击人身伤害事故或主机短路烧毁。
5. 不要遮挡，包裹，阻塞出风口或过滤网，以免引起主机损坏。
6. 机器在使用过程中如果出现故障，请及时断开主机电源，并将其直接送到神宝指定售后服务点进行专业性维修，切勿自行拆卸主机，由此引发的损失，本公司及经销商概不负责。
7. 如果主机电源线有损坏情况发生，请及时将其送至神宝指定售后服务点进行更换原厂电源线，切勿私自拆卸主机更换电源线，以避免危险。
8. 请勿在浴缸，水盆或其他盛水容器附近使用本产品！当在浴室中使用本产品时，请在使用后拔下电源插头，因为即使关闭本机电源开关，接近水源也可能会造成危险发生！
9. 请严格按照本说明书安装及使用相对应的立式支架或壁挂式支架。

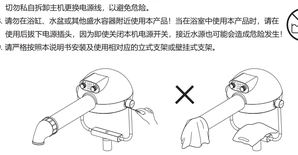

内页九

壁挂安装基础要求

1、墙体要求：
墙体必须足够坚固以支撑壁挂组件和主机，
必须是实心墙，不可安装在空心墙上。
2、建议安装高度：
从地板到墙体固定板下端垂直距离184cm-195cm之间。



天花板吊装基础要求

对于墙体不符合安装要求的用户，或者需要在离官家居中安装多台供多人使用的情况，可以采用天花板吊装的形式，可以自行制作天花板支架或者向神宝公司咨询定制购买。



墙体固定板的安装

- 墙体固定板安装：
  如下图所示：以墙体固定板为模板，在墙体上钻三个孔，并用膨胀螺丝进行固定，然后将吊臂安装至固定板上。

注意：确保固定板水平安装，且安装的墙面与地面垂直，否则会导致机器自动旋转。

内页十

壁挂式吹风机组装示意图

注意：
1、使用前请仔细检查壁挂支架与主机之间是否安装牢固，避免可能的松脱或坠落等引发不必要的损伤。如因未安装牢固导致机器损坏或因此导致的其它意外伤害，神宝公司及销售商概不负责。
2、牢固安装后，请将电源线置入壁挂支架上的线卡内，达到方便使用及美观的效果。

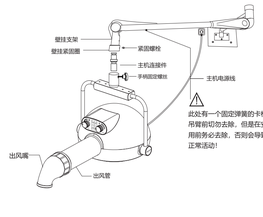

此处有一个固定弹簧的卡栓，在安装吊臂前切勿去除，但是在安装完成使用前务必去除，否则会导致吊臂无法正常活动！

内页十一

日常维护注意事项

注意：在维护前，请务必断开主机电源，否则可能导致人身伤害事故！
1、请经常清洁主机的进风过滤网，宠物洁营业使用时，建议每天至少清洁一次以确保正常风力和噪音，逆时针旋转取下进风网顶部螺栓，取出进风过滤网，对进风网和过滤网进行清洁，如必须洗涤，务必待完全干燥后再安装使用！
2、如需清洁外表，请务必使用柔软的干布擦拭，切勿使用非中性的清洁剂进行清洁，否则可能导致机体外观损伤。

主机操作介绍

本机电源开关在主机背后，红色按钮，使用前请先打开电源开关。
本机采用了智能数码控制，在突然断电的情况下，会自动保存上次操作时设定的出风档位及出风温度。

风速档位调节 & 温度档位调节
采用最新的编码器开关控制，顺时针旋转调高，逆时针旋转调低。操作面板上相应的档位指示灯会点亮或熄灭，并有调节提示音。

“待机/开机”设置
您不必每次都通过开关主机背后的电源开关来开关吹风机。
您可以通过按下风速开关来切换开机/待机模式，非常便捷。
当“待机”红色指示灯亮起时，吹风机处于待机模式。

“智能护理”设置
您可以通过轻按温度开关在“正常/智能护理”模式之间切换。
红色“护理”指示灯亮起，吹风机处于智能护理模式。

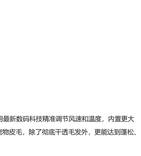

内页十二

脚架式吹风机组装示意图

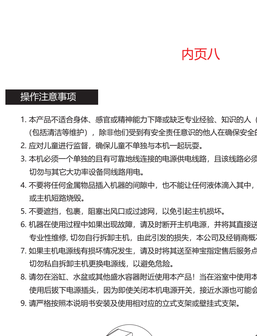

在主机安装时，请务必先将主机安装在伸缩管上用固定螺栓进行锁紧，在所有的装配完成之前，请不要松开高度调节松紧旋钮。如果伸缩管弹出，其强大的冲击力会导致意外的伤害！

注：在使用前，请务必检查主机是否已与脚架稳固的安装，带刹车的万向轮是否已锁紧。

内页十三

SHERNBAO を利用していただき、ありがとうございます。専門ペット大型ドライヤー当該ドライやーはペット美容産業業用の為に、設計した専門かつ高級のなドライヤーであります。最新デジタル科学技術にて風速及び温度を調節しますが内部に更なる効果のあるマイナスイオンゼネレータを配置されていまっす。髪の毛などの静電気を取り除き、熱が均衡的に配布。さめ、ペットの皮の毛が完全に乾燥された場合を除き、よりふわふわ、自然、旺盛な状態になれることができます。

2019年の夏に、“Smart Care”ヘアケア機能をアップグレードしました。 熱い空気と冷たい空気は自動的に6秒ごとに循環し、ペットの髪をよりふわふわさせ、水和させます。
熱風モード：髪の鱗質を傷つけずに素早く髪を乾かし、湿気の吸収を高めます。
冷気モード：髪の鱗を素早く引き締め、水を満たし、水を固定し、そしてグリースを減らします。

立て式取付と壁掛け式取付も速やかにエアーアウトレットを必要な場所に固定でき、自分の要望に応じおうせまして調整できます。美容師の両手が働かず、便利かつ速いですますので、非常に作業効率を上げます。

より当該製品を利用し、経験できるように、何卒取り扱い書いにより本体を取付してください。設備起動稼働前に、下記注意事項に従ってください。
1. 現時点利用している電線路の電圧及び最大許容電流は本製品との要求と一致しているかどうかを御確認ください。
2. エアーインテークに髪が濃厚されるかどうかを御確認ください。すこし髪の毛が厚く堪合、直ちに清潔してから設備起動し、使ってください。
3. 本設備の風速ギアスイッチ、温度ギアスイッチが最低ギアの状態であるかどうかを御確認ください。（操作時、自分の使用要望に応じまして次第にギアを上げ、風速及びエアーアウトレット温度を変えます）。

製品スペック

風速	最高22米/秒
風量	7.4立方メートル/分
温度	最高室温+60℃
功率	AC 100V-120V 50-60Hz 1500W MAX
マダー寿命	≥ 8000時間

備考：本体に関し、必ず電源線をアースに接し、しかも、最小負荷電流は15A以上でなければいけません。

内页十四

操作のための注意

1. 本製品は、身体的、感覚的、精神的能力が低下した、または経験や知識が不足している人（8歳以上の子供を含む）が使用することを目的としていません。彼らの安全に責任がある人による監員の使用に関する指示。
2. 子供たちは、彼らが器具と遊びないように監督されるべきです。
3. アプライアンスには、信頼性の高いアース接続を備えた独立した電源ラインが必要です。他の高電力機器に電気を使用しないでください。
4. 追加の保護のために、定格を持つ残留電流装置（RCD）の設置浴室に供給する電気回路には、30 mAを超えない残留動作電流が推奨されます。インストーラーにアドバイスを求めてください。
5. 電源コードの隙間に金属製のものを差し込まないでください。また、液体が漏り落ちないようにしてください。さもないと、感電やけがをしたり、アプライアンスがショートする恐れがあります。
6. アプライアンスの損傷を防ぐために、排気口と吸気口を覆ったり、覆ったり、塞いだりしないでください。
7. アプライアンスの使用中に故障が発生した場合は、時間内にホストの電源を切断し、専門家によるメンテナンスのためにShenbaoの指定アフターサービスセンターに直接送ってください。アプライアンスを自分で分解しないでください。さもなければ、Shernbaoの会社およびお私達のディストリビューターはこれによって引き起こされる少しの損失に対しても責任がありません。
8. 電源コードが損傷している場合は、製造元、そのサービス代理店に交換してください。
9. 警告・この電気器具を浴槽、洗面台、またはその他の水の入った容器の水の近くで使用しないでください。
10. 電気器具が浴室で使用されるとき、水の近くで使用後にそれを抜いてください
    アプライアンスの電源を切っても危険です。
11. この取扱説明書に従って、対応するスタンドブラケットまたは壁取り付け用ブラケットを取り付けて使用してください。



内页十五

壁掛け取付基礎要求

1、壁に対する要求：
壁掛けのモジュール及び本体を支えられる為に、壁は必ず十分な丈夫さがあります。 中空壁ではなく、必ず中実壁に取り付けます。
2、お勧めの取付高さ
垂直距離としては、床より壁における固定板まで184cm-195cmであります。



取付要求未満足の顧客

又は美容室に数人が利用できるように数台取り付くの要な場合、天井板掛け式にて対応をお勧めです。自分で制作しても宜しいです。
又は神宝会社まで問い合わせて
頂きましてカスタマイズ購入にて入手可能です 。



壁固定板の取り付け

壁固定板取付：下図のように、壁固定板をテンプレートとします。壁に穴を三つ空け、アンカボルトにて固定作業を実施します。そしてフームインストールから壁固定板に。



ウォールプレートが水平に設置され、設置される壁が地面に対して垂直であることを確認してください。
そうしないと、作業中にヘアドライヤーが自力で移動します。

内页十六

壁掛け式ドライヤー組立概念図

注意：
利用前、よく壁掛けホルダー と本体の間はちゃんと組み立てるかどうかをご確認ください。



何卒ますず本体を支えパイプに取付き、全ての組立作業が終わるまでに、高さ調節ノブよ不用意締付や位緩固切、リ手放さないでください。果支弾管弾出、其強大的冲支えパーツが傷くと、事故が発生します。

備考：
利用前、何卒本体と立て式ホルダーよく組み立てているかどうか、プレギー付きのキャスターはしかっり締め付けられているかどうかを御確認ください。

アームを取付く前、ここにあるスプリング固定用のボルトを何卒取り外さないでください。しかしながら、取付作業が終われば、アームが簡単なく脱離できるように、取り 外してください。

内页十七

每日のメンテナンスノート

注意：傾害事故を起こさないように、メンテナンス前、何卒本体の電源を切ってください。
1、何卒よく本体のエアーインテークフィルターを綺麗にしてください。ペットショップ営業中利用する場合正常的な風力及び騒音を確保できるように、毎日に一回以上清潔することをお勧めです。逆時計回り、エアーインテークフィルターの頂部におけるネットを取り外し、エアーインテークフィルターを取り外します。エアーインテーク網及びフィルターを綺麗にします。必ず洗浄しなければいけません。何卒完全に乾燥になるまでには取付き、使わないでください。
2、表面を綺麗にする必要であれば、何卒柔らかい乾いた布にて拭いてください。本体に外観損害を与えないように、溶中性洗浄剤を使わないでください。

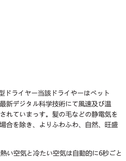

操作の概要をホスト

電源スイッチは、ドライヤーの後ろにある電源コードの横にあります。
ご使用前に電源スイッチを入れてください。
スマートデジタルコントローラーを内蔵していますので、突然電源が切れても前回使用時の風速と温度設定を自動的に記憶します。

電波と温度調整
最新のデジタルコントローラーを内蔵していますので、風速と温度を簡単に制御できます。各ダイアルは時計回りで高/高温、反時計回りで低速/低温となり、
設定はランプ表示及び警告音で確認出来ます。

待機設定
あなたは、毎回、背中に電源スイッチを切り替える必要はありません。
風速のスイッチを押すと、オン/スタンバイモードを切り替えることができます。
「Standby」の赤色表示灯が点灯しているときは、待機モードである。

スマートケアの設定
温度のスイッチを押すと、通常/スマートケアモードを切り替えることができます。
「Smart Care」の赤いインジケータライトがオンになっているとき、ドライヤーはスマートケアモードです。



内页十八

足場ブロワーの組立図

何卒ますず本体を支えパイプに取付き、全ての組立作業が終わるまでに、高さ調節ノブよ不用意締付や位緩固切、リ手放さないでください。果支弾管弾出、其強大的冲支えパーツが傷くと、事故が発生します。

備考：
利用前、何卒本体と立て式ホルダーよく組み立てているかどうか、プレギー付きのキャスターはしかっり締め付けられているかどうかを御確認ください。